




STAYFIX

PA Door outer joining.

Fabrication Detail_Outer

Miter Cut and Mechanical Joint using threaded corner cleat
Drill hole at 27mm from corner and tighten by M4 screw.
Use Che10 and Che 5 Chevron to keep inline

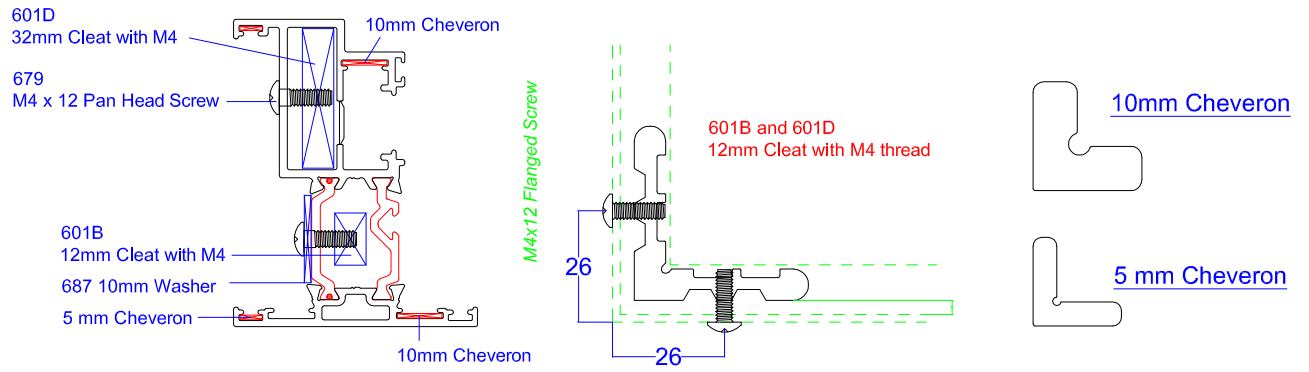

Tear off locally for hook and dead bolt

Remove Locally for Slave bolt

